



# MEDICAL SUPPLY BULLETIN

HHS SUPPLY SERVICE CENTER

PERRY POINT, MD 21902

**We Service the World**

Steven Pearson, Director

Annette Quiñones, R.Ph, Editor


BULLETIN NO. 4

April 24, 2012

## SSC TransTracker® CF

Valued Customer:

SSC has always strived to excel in customer service and provide you with news of any upcoming innovations or changes. So to better serve you we have implemented a new temperature indicator program. The SSC TransTracker® CF that we will be shipping out soon to you with your refrigerated shipment is required to stay within an acceptable temperature range. We have included this dual temperature indicator (SSC TransTracker® CF) to determine if your product has either exceeded or went below a specific temperature range. Please follow the steps below to confirm that your product has not gone out of the temperature ranges set by the manufacturer when you receive your refrigerated products.

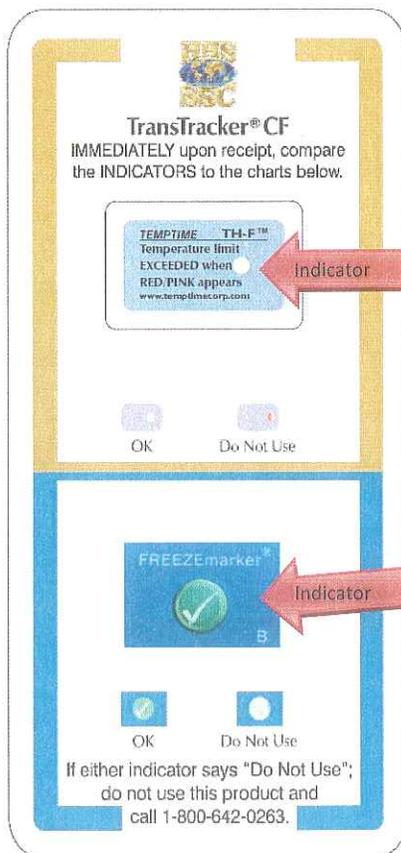

Step 1. If the dot on this indicator is white like the example on the right; your product is OK.

Step 2. If the dot on this indicator is red like the example to the right; please call customer service at 1-800-642-0263

Step 3. If you can see the check mark as in the example to the right; your product is OK.

Step 4. If you cannot see the checkmark as in the example to the right; please call 1-800-642-0263.



  
Steven Pearson